

Recommended Tools:

- Air Wrench or Socket Ratchet
 - 7/16" Socket
 - 10mm Socket (only required to replace OEM partition)
- 7/16" Box End / Open End Wrench
- Torque Wrench
- Electric Drill
 - 3/8" Drill Bit (drill stop recommended)

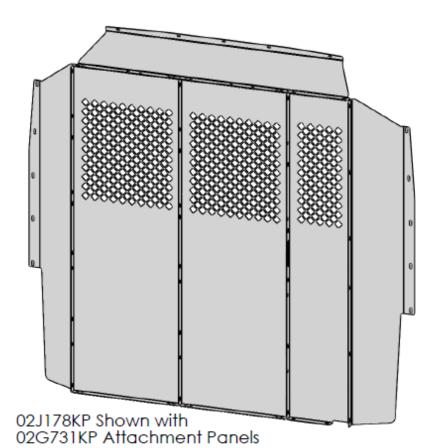

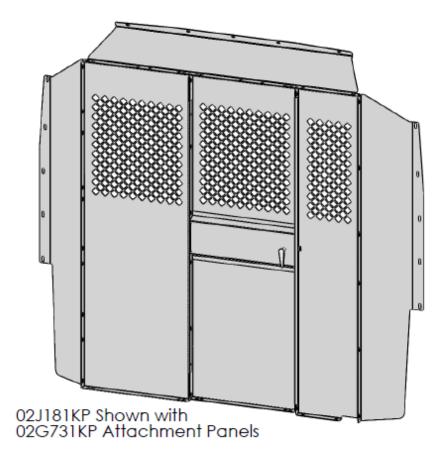

Attention: If replacing an OEM partition or if there are threaded HEX Mounting Nuts already installed in the B-pillar and Roof Bow, please skip pages 5 & 6 of this installation guide

Your partition panel configuration (solid / perforated) may vary based on order number. Consult your salesperson for details.

Review this document to ensure that all parts and hardware are included in the package, before installation.

In the event that parts are missing please contact

Masterack @ 1-800-222-8785, to re-order missing parts.



Promaster Partition Installation


Item #	Part # (Individual)	Description
1	02H220	PROMASTER PARTITION TOP ATTACHMENT PANEL
2	02H221	PROMASTER PARTITION CS ATTACHMENT PANEL
3	02H222	PROMASTER PARTITION SS ATTACHMENT PANEL
4	02J158	HIGH/MID ROOF SLD PNL TYPE 2
5	02J159	HIGH/MID ROOF PRF PNL TYPE 2
6	02J160	HIGH/MID ROOF SLD CS TYPE 2
7	02J161	HIGH/MID ROOF PRF CS TYPE 2
8	02J162	HIGH/MID ROOF SLD HGD TYPE 2
9	02J163	HIGH/MID ROOF PRF HGD TYPE 2

NOT-HINGED

02J176KP = #4 + #4 + #6 02J177KP = #4 + #5 + #7 02J178KP = #5 + #5 + #7

HINGED

02J179KP = #4 + #6 + #8 02J180KP = #4 + #7 + #9 02J181KP = #5 + #7 + #9

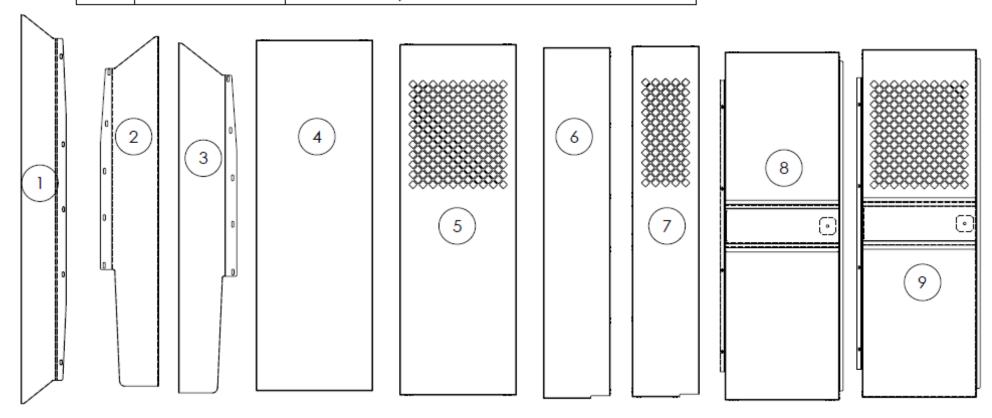

Page **2** of **11**



Partition Panels Hardware

PART NUMBER	DESCRIPTION	QUANTITY
RM442002	BAG POLY 6X8 3 MIL	1
RM510107	BOLT CARRIAGE 1/4-20X3/4 ZINC	20
RM511458	SCREW 1/4-20X3/4 7/16HEX WSHR	10
RM511471	SCREW 1/4-20X1-1/4HEX WHD	4
RM520111	PLUS NUT #S25-PB-280 PRE-BULB	14
RM520112	PLUS NUT TOOL #C500-25	1
RM520312	NUT 1/4-20 E-STOP	20
RM541039	WASHER SPLIT LOCK 1/4 GALV	14
RM541061	WASHER 1/4" USS FLAT ZINC	20

Cab Divider Door Hardware (where applicable)

PART NUMBER	DESCRIPTION	QUANTITY
RM580030	PLASTIC LATCH COVER PLATE 2004	1
RM580314	HANDLE #H-I7003C INSIDE CHROME	1
RM580365	HANDLE RND FLSH MNT PRTN DOOR	1


Partition Attachment Panels Hardware

PART NUMBER	DESCRIPTION	QUANTITY
RM541039	WASHER LOCK-SPLIT ¼" ZINC	19
RM511603	SCREW SOCKET HEAD CAP M6X1X18 BLK OX 12.9	15
RM510107	BOLT CARRIAGE 1/4-20X3/4	18
RM520312	NUT ESTOP ¼-20	18
RM541061	WASHER ¼ " USS FLAT	37
RM520111	PLUS NUT #SRT25PB280 PRE-BULB	19
RM520112	PLUS NUT TOOL #C500-25	1
RM511477	SCREW 1/4-20X1-1/4 HWH G8	1
RM511428	SCREW 1/4-20 X 1" HEX HD G8	19



BEFORE DRILLING

 CHECK ALL MOUNTING LOCATIONS TO PREVENT PENETRATING










The Plusnut® is pre-bulbed for easy installation





 The Plusnut® is pre-assembled with hex cap and hex bolt. Then it is inserted into a pre-drilled hole





As the bolt is tightened, the Plusnut® upsets and provides outstanding blind fastening holding power





C-500 tool tightens bolt thru hex head cap into Plusnut® A ratchet, open-end or closed -end wrench can be used.





Fully upset Plusnut® provides a reliable nut plate for fastening.






Cut out a section of the plastic trim on both B-Pillars, locate the OEM hex-holes, and install 10x Plusnuts*.

Hardware:

• (10x) Plusnuts [5x for each B-Pillar]


* REFER TO PAGE 4 FOR PLUSNUT INSTALLATION




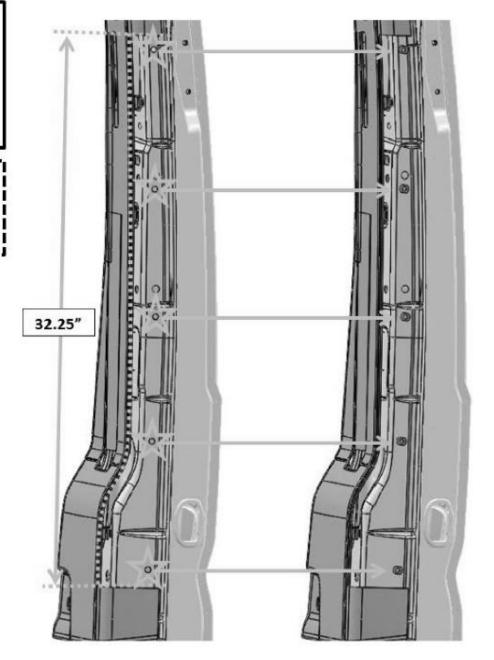

Page **5** of **11**

 Roof Bow Plusnut® Installation



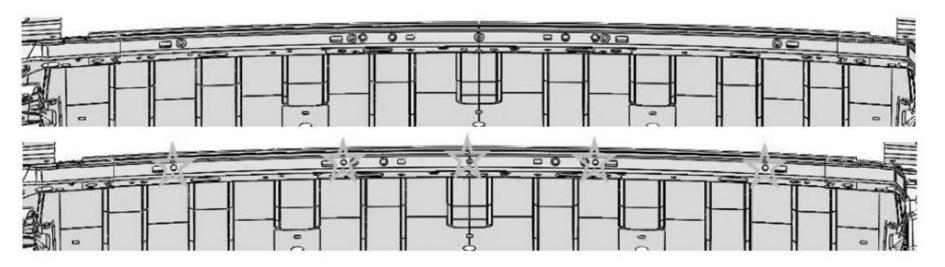



Locate the OEM hex-holes along the front Roof Bow (marked with a star in the above image), and install 5x Plusnuts*.


Hardware:

(5x) Plusnuts

* REFER TO <u>PAGE 4</u> FOR PLUSNUT INSTALLATION



Floor Plusnut® Installation

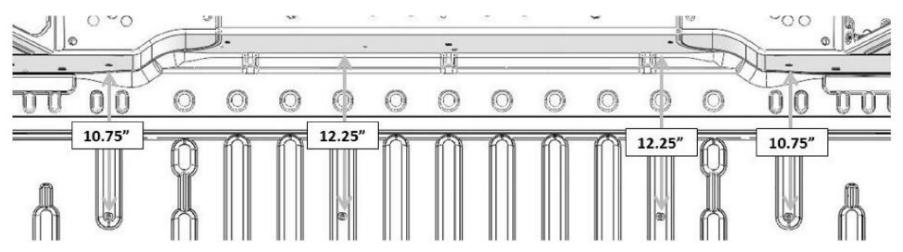



Drill 3/8" holes at the four locations (specified in the above image) on the floor of the vehicle, and install 4x Plusnuts*.

Hardware:

(4x) Plusnuts


* REFER TO <u>PAGE 4</u> FOR PLUSNUT INSTALLATION



Partition Assembly Installation


www.masterack.com

•Assemble and secure partition components at the slots marked at right.

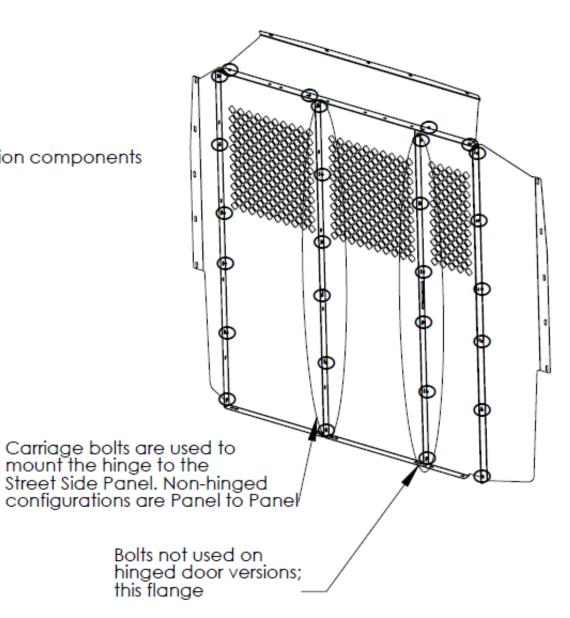


TORQUE SETTING:

 
1/4-20 Grade 5 = 7 - 9.6 ft-lbs








Hinged Door Handle Assembly

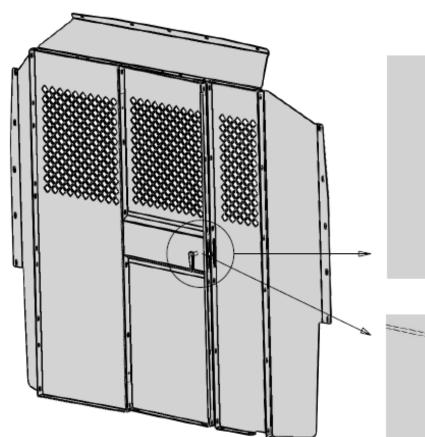

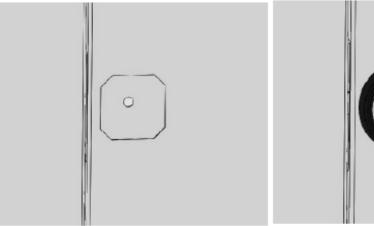

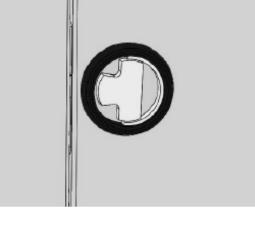

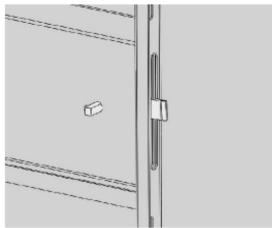

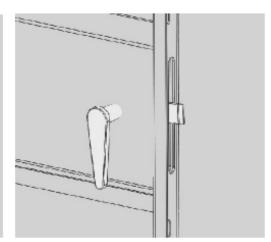


Snap the CAB-Side Door Handle into the hex cutout (be sure that lock cam is aligned properly). Secure the Cargo-Side Door Handle to the square rod protruding from the back of the Cab-Side Door Handle.

Hardware:

- (1) Cab-Side Door Handle(1) Cargo-Side Door Handle

Note: Plastic Latch Cover Plate not used.




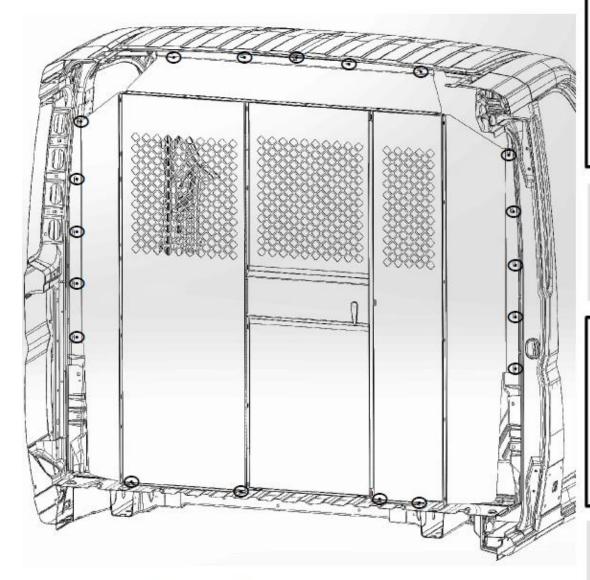


Torque Settings: 1/4-20 Grade 8 = 10 to 13.5 ft-lbs M6 Grade 10.9 - 11 to 15 N-m Standard Install: Mount the assembled partition to the installed Plusnuts*.

Standard Hardware:

 - (19x) 1/2-20x1 Hex Head Bolt [Grade 8]
- (19x) ¼" Split Lock Washer
- (19x) ¼" Flat Washer

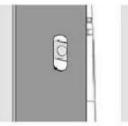





Replacing OEM Partition: Bolt the assembled partition to the OEM Hex mounting points.

Replacing OEM Partition Hardware:

- (19x) M6x1x18 Socket Head Bolt [12.9]
- (19x) ½" Split Lock Washer
- (19x) ¼" Flat Washer







Page **10** of **11**





3 Year / 36,000 Mile Limited Warranty

MASTERACK® commercial van and pickup equipment is warranted to be from defects in material and workmanship, under normal use and service for a period of one (1) year from date of purchase. Factory installations, and products installed in new vehicles by an authorized MASTERACK® installer are warranted for (3) years or 36,000 miles (60,000 KM), whichever comes first. This warranty covers only repairs, or at MASTERACKS' discretion, replacement to correct any defects related to materials and workmanship.

This warranty does not apply to:

- Additions, alterations, or installations made by persons including dealers, other than MASTERACK® and it's authorized distributors, made in accordance with MASTERACK® specifications and / or instructions, nor to defects arising out of attribute to such additions, alterations or installations.
- Defects attributable to abuse or misuse of the product, misapplication, negligent accident, modification or tampering.
- Damage resulting from failure to promptly notify and comply with the instructions of the dealer or manufacturer about defects when noted.
- Any incidental or consequential damages connected with a defect, either while under warranty or afterward, including the cost of a rental truck and / or loss or revenue.

THE WARRANTY IS THE ONLY WARRANTY APPLICABLE TO A MASTERACK PRODUCT PURCHASE. ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. MASTERACK® AND ITS SUBSIDIARIES, SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUR OF ANY BREACH OF THIS WARRANTY, NOR SHALL THE DAMAGES EXCEED THE RETURN AMOUNT OF THE PURCHASE PRICE PAID BY THE ORIGINAL PURCHASER.

Warranty claims must be submitted to either your sales representative or a customer service representative at **1-800-222-8785**. The vehicle must be delivered to the original MASTERACK® authorized dealer for inspection and any warranty service. Any warranty service to be performed by a source other than MASTERACK® location or an approved MASTERACK® distributor must be authorized in advance of the repairs by the MASTERACK® Warranty Administrator and a purchase order issued by MASTERACK® in advance or repairs for the authorized repairs.